

文件编号	FTS-UVLED-OS-		
Number	1909.V6		
版本	A3.2		
Edition	A3.2		
生效日期	From August 31,		
Issueddate	2018		

产品规格书

Product specification

产品名称	IIVI ED point auring light course		
Products type	UVLED point curing light source		
产品型号	UVSP81		
Products series			
产品规格	SPHD-Ø6		
Specification	SPHD-900		

This UVLED light source is the standard specification of Futanshi Company. The order quantity is between 1-50 sets and can be shipped on the same day. The order quantity is more than 50 units, please contact us to confirm the delivery date.

Send an inquiry to E-mail: futansi@futansi.com

You can also call: 021-69790531, welcome to contact us!









Approved	Review	Formulate
FTS	775	FTS



使用产品请一定遵守以下事项! 请勿在可燃性气体环境中侵 否则将导致本产品异常发热, 置烟。 ●不可在电源接通状态下进行施工(接线、拆卸等) 否則将可能引发爆炸。 ● 请勿将本产品投入火中 0 ■用切作中厂由t投入人中。 香则将特身电子部件等域裂。 ●LED完起时,切勿直视直射光或反射光,或使其照射到皮肤上。 否则可能导致眼睛或皮肤损害或炎症。 0 否则可能导致触电。 ● 请勿在本产品上放置物品等而造成通风孔堵塞。 否则可能因加热而导致烧损。 ● 照射过程中或照射刚结束后,请勿赤手触摸。 请在本产品的保证特性,性能范围内使用。 超过保证特性,性能的极限值将导致破损。 通电时请勿触摸接线端子。 0 及利辣作的调劳企制服款户目填积助对用具。 否则需要等级情或皮肤薄塞炎症。 主机产生的放射光中含有365cm或385cm波长的UV光, 因此消务必使用防UV光护目线 易必在切断电源的状态下进行LED照射头的清洁。 在供电状态下进行清洁,可能导致眼睛或皮肤损害或炎症, 还可能造成触电。 否则可能导致触电。 线、连接器等请切实连接。 否则将可能导致本产品异常发热、冒烟。 可使用规格范围外的输入电源。 不则可能导致格据。 0 否则可能导致%请切实进行接地。 否则可能导致触电或误动作。 ● 请勿在温度变化剧烈,发生结露的地方使用。 勿分解,改装。 否则可能导致事故,受伤或触电。 否则将导致本产品异常发热,冒烟。 接触LED-UV光可能导致眼睛或皮肤损害或炎症。 3 否则会导致故障。请勿在有剧烈振动或冲击的地方使用。

① UVLED be careful when using the product:

- General Notes
- •Please use the products designated and recommended by our company when connecting the cable of the device. When causing damages by using products designated and recommended by non-our-company, it will not covered by the warranty.
- The additional connecting wire and LED irradiation head can be used or bent. Under standard experimental conditions, the bending performance of cable are satisfied. While the performance under any conditions under its actual use cannot be guaranteed.
- Do not disassemble, modify the internal settings. If disassembling and modification caused any problems, which will not be covered by the warranty ∘
- Installation environment
- •environmental temperature 0°C-+45°C (non-freezing) •environmental temperature 30% -85%RH (noncondensable)
- In the place of no dust, soot, conductive dust, corrosive, flammable gas, salt, iron, etc. Places that do not touch water, oil, medicine, etc.
- Places of no violent temperature changes, vibrations and impact. a place without direct sunlight fields and strong electric fields
- About the power supply
- ●Please supply single-phase 200V-240V (frequency 50Hz-60Hz) power supply voltage。
- Please make sure to be grounding.
- Do not use the same power network with motors and inductive machinery, high power devices .
- It has sufficient interference resistance to the interference superimposed on the power line, but it is recommended to use an isolation transformer for proper disposal before power supply to reduce interference.
- About the wiring
- For the controller, the wiring between the LED heads, please use the additional cable and connect it securely. ∘
- The additional connecting wire and LED irradiation head can be used or bent.

 When using in bending, as a minimum bending radius greater than 110mm, please perform the system design. Bending with radius less than recommended, there is the possibility of cracking occurring in a short period of time.
- ●When an external I/O is connected to an inductive load (motor, breaker, etc.), please connect an interference absorbing component (interference suppressor, etc.) on the load side. ∘
- To prevent contact failure after wiring the power cable, securely tighten the fixing screws of the connector. ∘
- •Please load and unload the cable through the connector (plug).

② Scope of application

The UVLED light source is a semiconductor light-emitting device that directly generates ultraviolet light, and is a light source that integrates a certain wavelength of a high-power LED having an emission wavelength of 200 nm to 450 nm according to a certain ratio. UVLED light source has the characteristics of energy saving, long life, no pollution, stronger light, etc. It is suitable for large-scale mass production enterprises, and is suitable for small batch experiments in university laboratories and research institutes. UVLED is mainly used in industrial adhesives, packaging or label surface ink drying, home industry flooring and furniture varnish curing.




3 Basic parameters

Serial	Accessories	project	unit	skills requirement
number 1		Voltage \ current	220V, 1A	
2		Fuselage size	mm	175×95×150
3		Cooling method	Air cooling	Fan refrigeration
4		Control method	Four kinds	button / Pedal / RS232 serial port
5		Irradiation power adjustable range	mw	0%-100% Adjustable
6	Controller (UVSP81)	Irradiation mode	Manual	button / Pedal / RS232 serial port
7	(0 (51 61)		automatic	Timing time (0.1-999.9s)
8			ladder	Achieve step illumination (1-20 Step number)
9			pulse	Cycling step illumination single time, unlimited time
10			RS232 serial port	Realize read and write communication
11		communication control	I\O interface	Realize read and write communication
12		Operating ambient temperature/humidity	0~35 ℃ 859	% or less (no condensation)
13		Preservation of ambient temperature/humidity	-10~60 ℃ 85% or less (no condensation)	
14		LED type	Ultraviolet LED beads	
15		UVLED usage time	20000-30000 hour	
16		Heat dissipation method	Fan cooling or natural cooling Aluminium alloy 365.385.395.405±5nm	
17		Irradiation head material		
18		Wavelength range		
19		Outline size	I	Reference icon
20	Irradiation head	Luminous size	mm	6
21	(SPHD-Ø6)	weight	kg	0.2
22		Recommended distance range	mm	17
23		Peak irradiation intensity	Mw(MA	X) Reference icon
24		Illumination uniformity	Reference icon	
25		Consumption of power		40W
26		Operating ambient temperature/humidity	0~35 ℃ 85% or less (no condensation) -10~60 ℃ 85% or less (no condensation)	
27		Preservation of ambient temperature/humidity		
28	Power cord	Cable	m	2-5M
29	Connecting line	Robot Cable	m	2-5M



4 Controller Outline Dimension Diagram and Installation Space


Outline Dimension Diagram and Installation Space

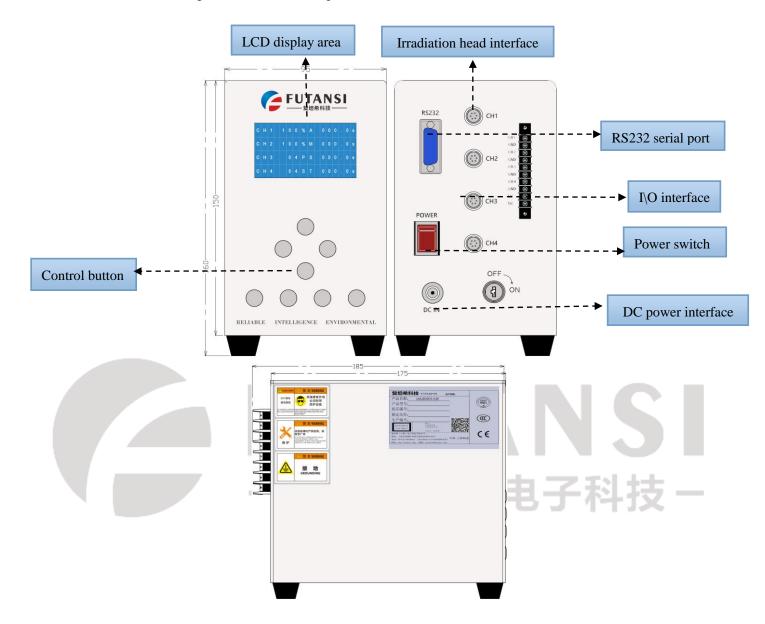

- Please do not install the controller in a closed space.
- Make sure that there is enough space for installation and use to avoid the exhaust of fan exhaust.


⑤ Shape and dimension diagram of irradiation head and installation space:

■Shape size and installation space

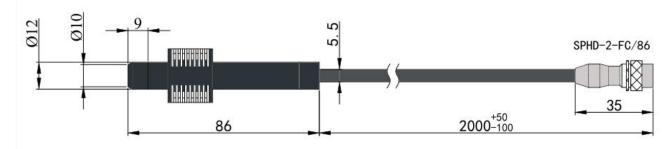





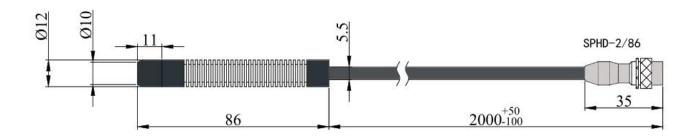

6 Ultraviolet external I/O connection

■External I/O connection (INPUT and OUTPUT)

Warning: Be sure to load and unload connections and connectors when the main power supply is cut off.

Pin number	Signal name	content
1 (CH1)	Channel one foot input, I/O input, PLC control signal	
2 (GND)	Channel one foot input, I/O input, PLC control signal	
3 (CH2)	Channel two foot input, I/O input, PLC control signal	
4 (GND)	Channel two foot input, I/O input, PLC control signal	
5 (CH3)	Channel three foot input, I/O input, PLC control signal	
6 (GND)	Channel three foot input, I/O input, PLC control signal	
7 (CH4)	Channel four foot input, I/O input, PLC control signal	
8 (GND)	Channel four foot input, I/O input, PLC control signal	
9 (NC)	Water-cooled signal input port (air-cooled device can ignore this port)	
10 (NC)	Water-cooled signal input port (air-cooled device can ignore this port)	



Solemnly declare:

Futansi (ShangHai)Electronic Technogy Co.,Ltd solemnly declare: Disassembling or modifying the UV controller or UV irradiator by yourself may cause the product to be used normally. The product assembled after disassembly may also cause personal injury or damage to the object. In this case, direct or indirect Loss of our company does not assume any legal responsibility:

- Electric shock that may be encountered by wet hand plugging and unplugging the power connector;
- FUTANSI or other branded goggles are not worn when using the device;
- Scratch caused by intentional or unintentional touch on the surface of the device immediately after using the device;
- Personal injury or object damage caused by using this equipment near water source or in wet places;
- Electrical shock or other accident caused by using this equipment during thunderstorm;
- Accidents caused by the use of equipment near gas or natural gas;
- Not strictly in accordance with the provisions of this manual;
- Continue to use the device in spite of error messages or failures;
- Untrained personnel use equipment;
- Continue to use defective devices;

Design manufacturer: Futansi (ShangHai)Electronic Technogy Co.,Ltd http://www.futansi.com

Shenzhen branch :

Futansi (Shanghai) Electronic Technology Co., Ltd. Shenzhen Branch Address: No. 86, Lane 3029, Huaxu Road, Qingpu District, Shanghai

(Minxing Industrial Zone)

Telephone: +86-21-69790531

24-hour service telephone: +86-21-13917846211

